

Parts List

Ref.	Item #	Item #	Item #	Description	Ref.	Item #	Item #	Item #	Description
DXH135HD DXH190HD DXH215HD					DXH135HD DXH190HD DXH215HD				
1	****	****	****		46	21734	21734	21734	Thermostat Assembly
2	40805	40804	40804	Top Half Shell	47	40830	40830	40830	Thermostat Mounting Bracket
3	40809	40807	40807	Radiation Shield Ass'y	48	26070	26070	26070	Loop Clamp
4	22233	22107	22107	Combustion Chamber Cyl. Ass'y	49	40831	40831	40831	I/O Switch
5	28739	27790	28739	Nozzle Adapter	50	21866	21866	21866	Flame Control Assembly
7	27429	27429	27429	Nozzle Retaining Ring, External	55	28735	28735	28735	Starter Capacitor
8	F221879	F221891	F221891	Fuel / Air Aspir. Nozzle	56	28780	28780	28780	Fuel Filter w/Gasket
9	22257	22257	22257	Burner Head Assembly	57	26225	26225	26225	Strain Relief Grommet
11	24346	24346	24346	Fuel Tube	58	21036	21036	21036	Power Cord
12	24345	24345	24345	Air Tube	59	40841	40841	40841	Right Side Rear Panel
13	F221857	F221857	F221857	Electrode Assembly	60	40842	40842	40842	Inlet End Rear Panel
14	21820	21820	21820	Insulated Electrode Cover	61	40845	40845	40845	(1) Inlet End Front Panel
15	F226865	F226865	F226865	CAD Cell Flame Sensor					(1) Outlet End Rear Panel
16	24011	24011	24011	CAD Cell Bracket	62	40847	40847	40847	Left Front Panel w/Door
17	40814	40814	40814	High Limit Control Assembly	63	40848	40848	40848	Right Side Front Panel
18	26885	26866	26866	Fan	64	40846	40846	40846	Outlet End Front Panel
19	26975	26975	26975	Power Pac Assembly	65	40852	40852	40852	Fuel Tank Assembly
20	40818	40818	40818	Motor Mounting Bracket	66	26959	26959	26959	Fuel Cap
23	22142	22142	22142	Igniter Assembly	67	26910	26910	26910	Fuel Cap Gasket
24	F226831	F226831	F226831	Rotor kit	68	28778	28778	28778	Fuel Gauge w/Gasket
	*Includes: Rotor, Rotor Vanes & Rotor Drive				70	22132	22132	22132	Tank Drain Plug
30	F221887	F221887	F221887	Filter Kit	* Not shown in the drawing				
	*Includes: Inlet Filter, Outlet Filter & Gasket, Fuel Filter Screen								
34	F266842	F266842	F266842	Pump Adjustment Kit					
	Includes: Plug, Adj.Screw, Spring and Ball Bearing								
39	40820	40820	40820	Inlet Grill Assembly					
40	40823	40824	40824	Bottom Half Shell					
41	26227	26227	26227	Snap Bushing					
42	****	****	****	****					
43	40826	40826	40826	Control Panel					
44	40828	40828	40828	Control Recess					
45	40829	40829	40829	Thermostat Knob					

